

# RULES FOR ELECTRIC METER & SERVICE INSTALLATIONS



## RULE 28

- (a) **Conditions for Interconnection - Permitted by PPL EU**
- (b) **Conditions for Interconnection - Customer Requirements**
- (c) **Detrimental Installation**

### RULE 28 - CUSTOMER'S EQUIPMENT — CUSTOMER-OWNED GENERATION OPERATED IN PARALLEL WITH PPL EU'S SYSTEM

**a. Conditions for Interconnection - Permitted by PPL EU:**

PPL EU will permit the customer to interconnect a customer-owned generation system with PPL EU's so long as the customer's system is installed in accordance with PPL EU specifications and is deemed by PPL EU to be compatible in all respects with the operation of PPL EU's system.

**b. Conditions for Interconnection - Customer Requirements:**

The customer shall furnish complete nameplate data on the proposed prime mover and generator(s) and consult with PPL EU on requirements for interconnection. Customer should obtain written approval of customer's initial plans from PPL EU to determine compatibility prior to installation. Customer shall not interconnect with PPL EU's system until:

- (1) The customer enters into an agreement with PPL EU for interconnection.
- (2) The customer obtains acceptance from PPL EU of installed inter-tie relaying and associated facilities.
- (3) The customer, at customer's own expense, makes whatever modifications are required by PPL EU for interconnection with PPL EU's system.

**c. Detrimental Installations:**

In accordance with the Tariff the customer will be required to disconnect the generator from PPL EU's system if, for any reason, PPL EU deems the continuation of the interconnected system is, or may be detrimental to the operation of PPL EU's facilities.